


# Paddle Wheel Instructions

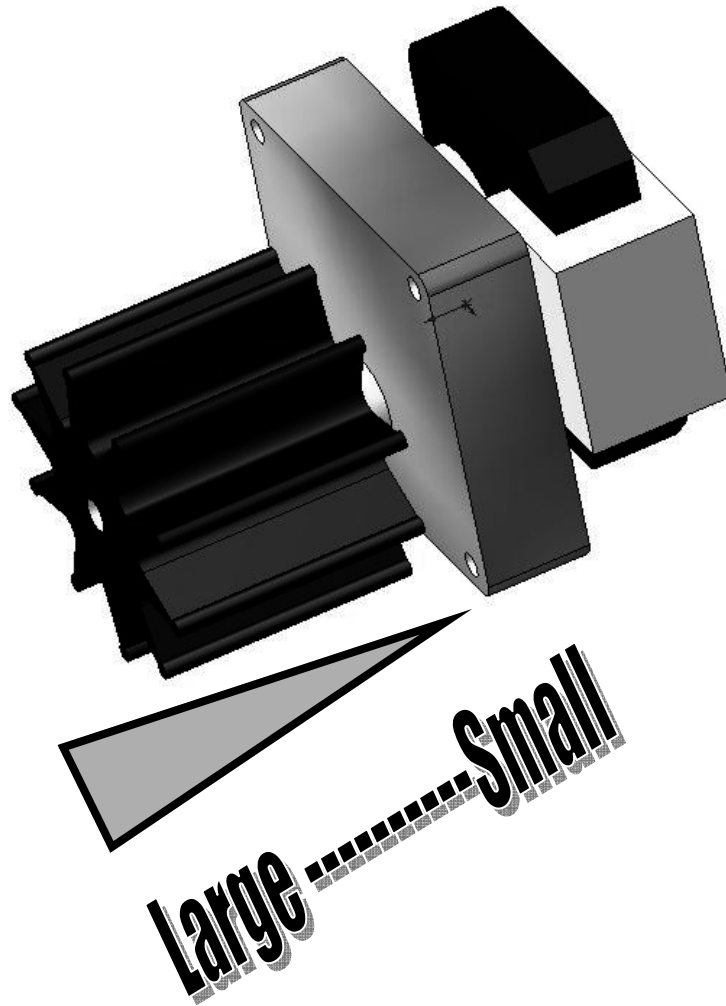

The paddle ribs taper so make sure the small side is against the auger motor you may need to lube the auger shaft with soap before sliding on the feed wheel.