

## Vacuum Switch Upgrade Procedure

Figure 1


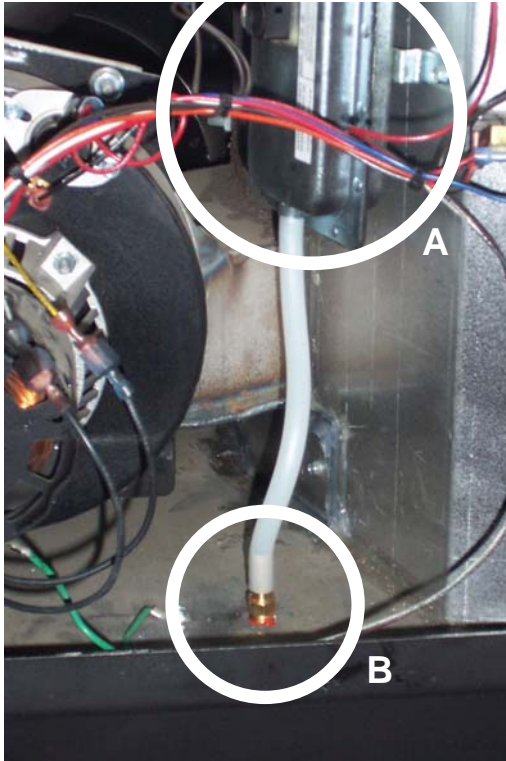


Figure 2

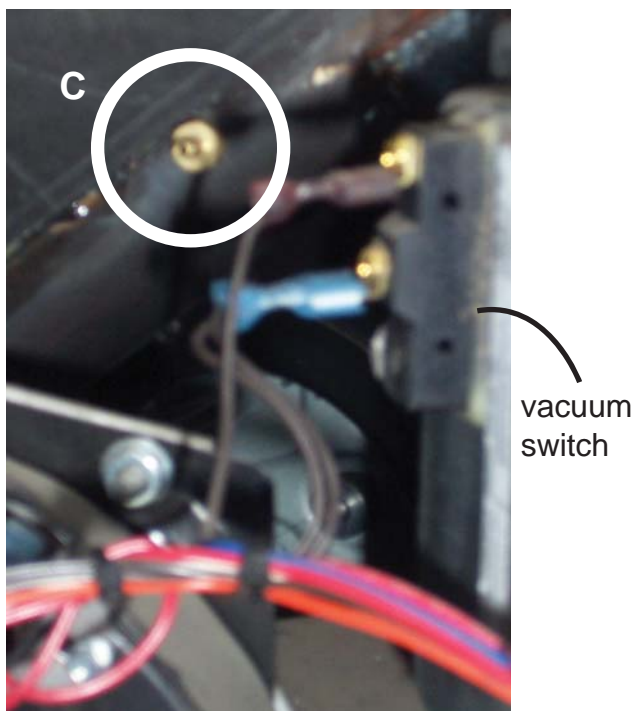

1. Remove side panel from the stove to reveal the vacuum switch (Fig 1, A).
2. Remove and discard 1/4" tubing attaching vacuum switch to 1/4" brass nipple installed on the auger shaft.
3. Drill and thread a 1/4" hole below the vacuum switch (it does not have to be directly beneath the switch).
4. Insert the new brass 3/8" nipple into this new hold with a light coating of silicon on the threads (Fig 1, B).
5. Measure, cut and insert a piece of 3/8" tubing from the bottom of the vacuum switch to the brass nipple below.
6. With a small amount of silicon, seal the old brass nipple opening as shown in Figure 2, C.
6. Replace side panel (Fig 3).



Figure 3